


## Introduction of OA Damper's movement

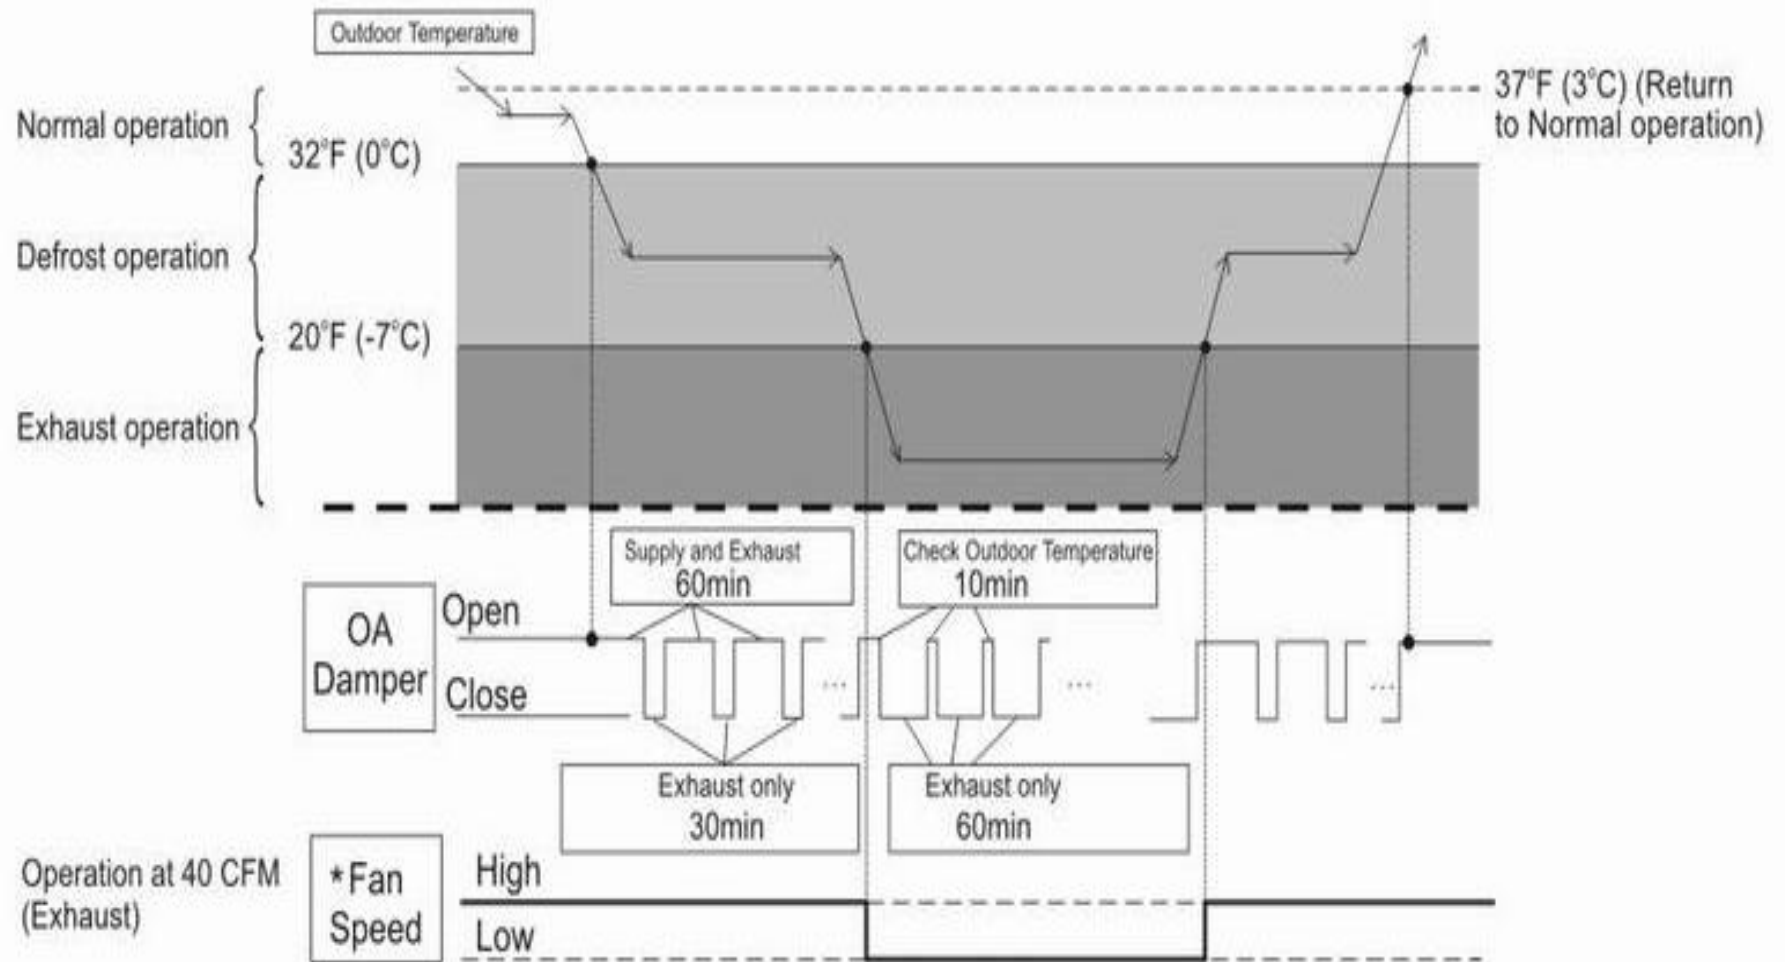

- \* The High speed is automatically changed to Low speed during Exhaust operation. Another speed and optional setting (High and Low) are not changed speed during Exhaust operation.