


DO WE
NEED TO
CREATE A
FRAME OR
WIDER SHIM
HERE?

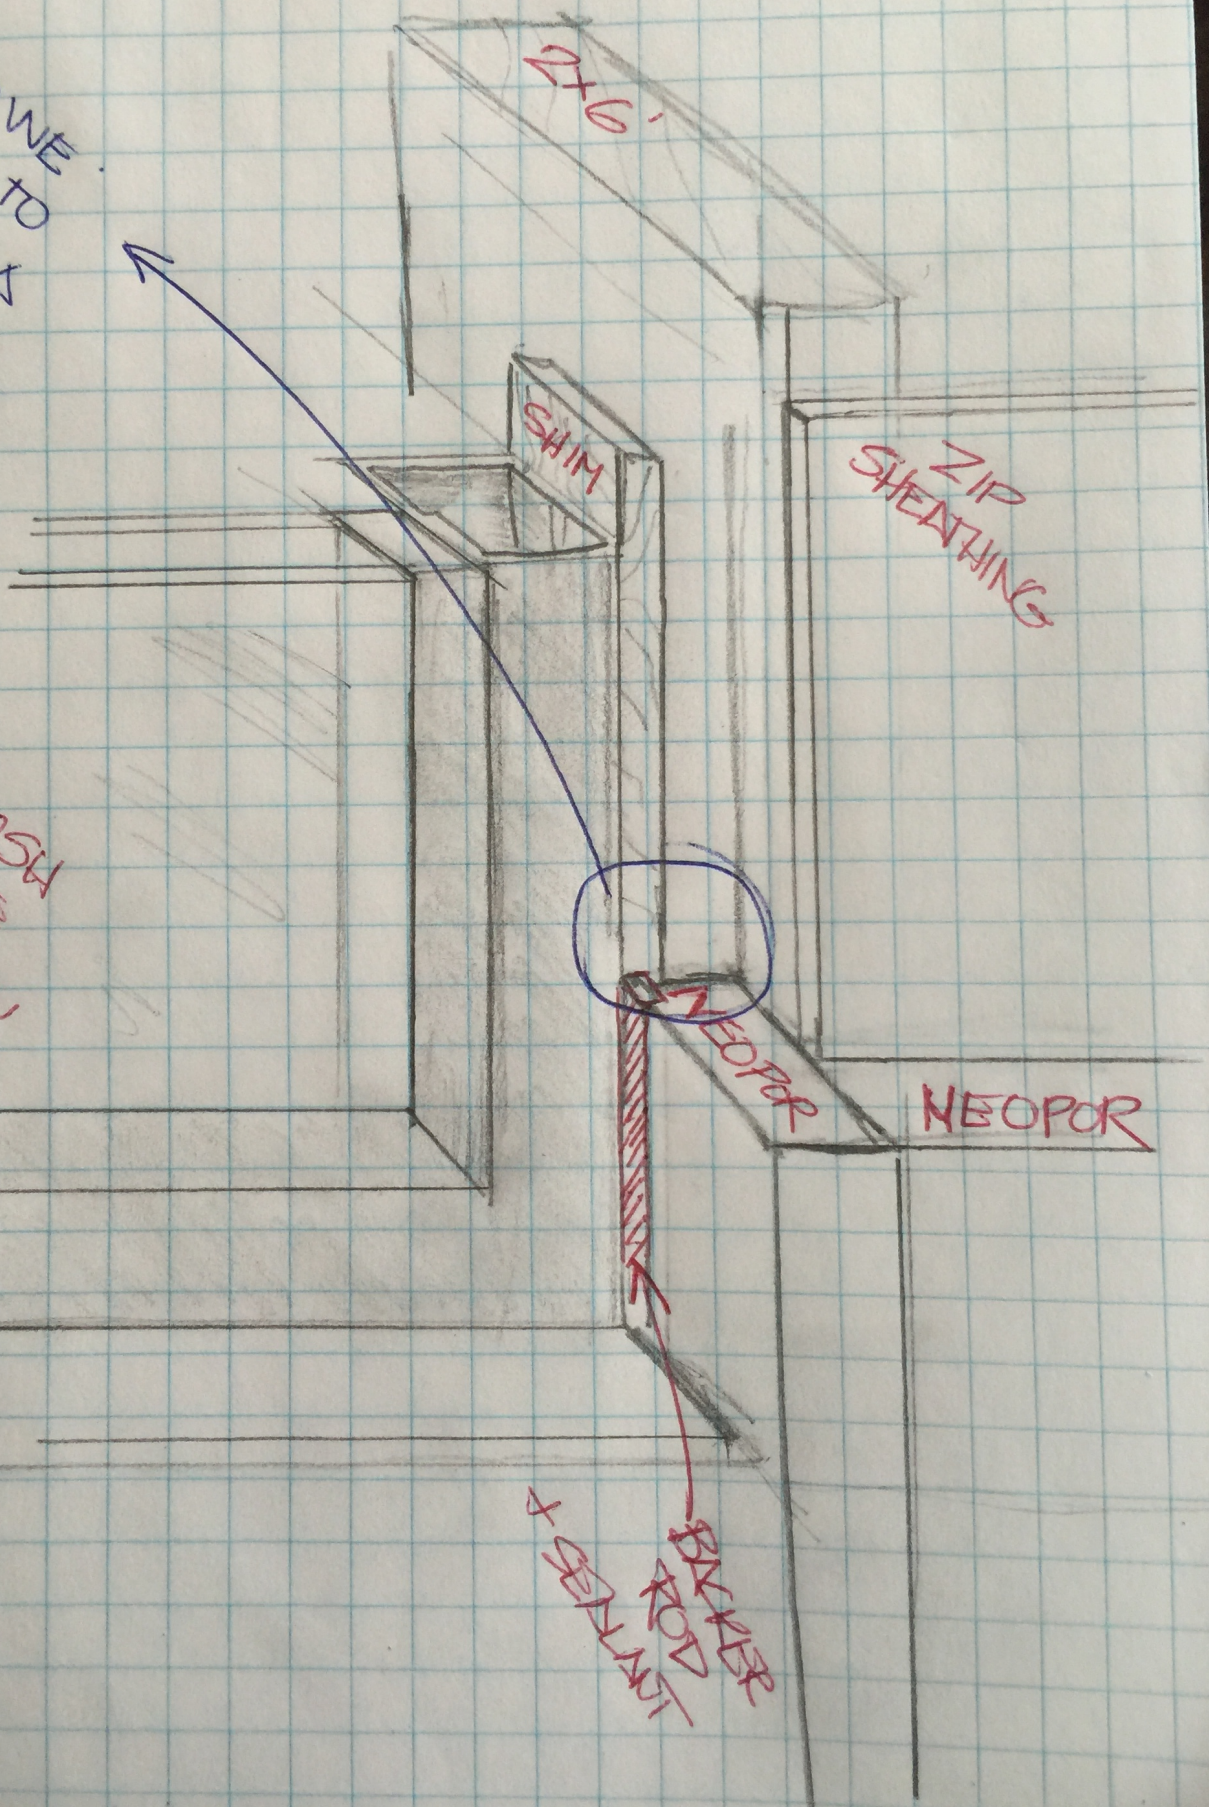

FLUSH
FRAME
WINDOW

INSET
3"

INSET
3"
INSULATION