



Warm Roof – Revised 2018-03-09

Top view

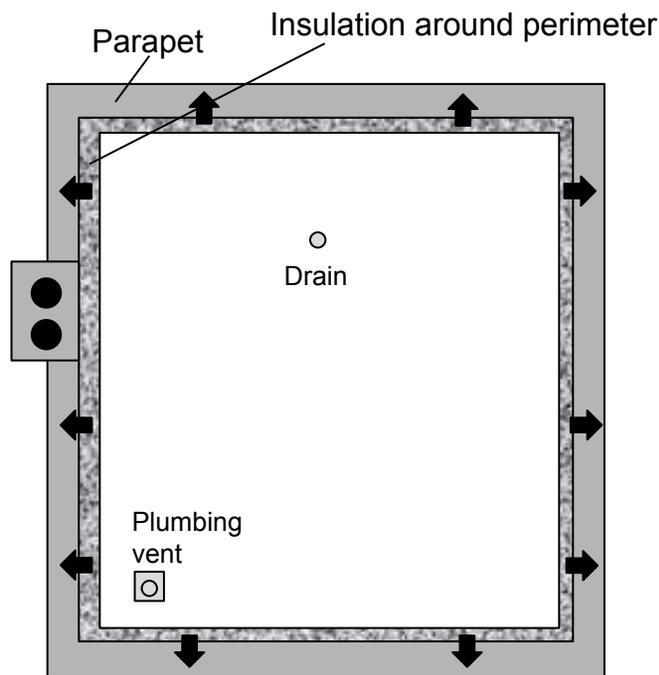

Side view (cutaway)

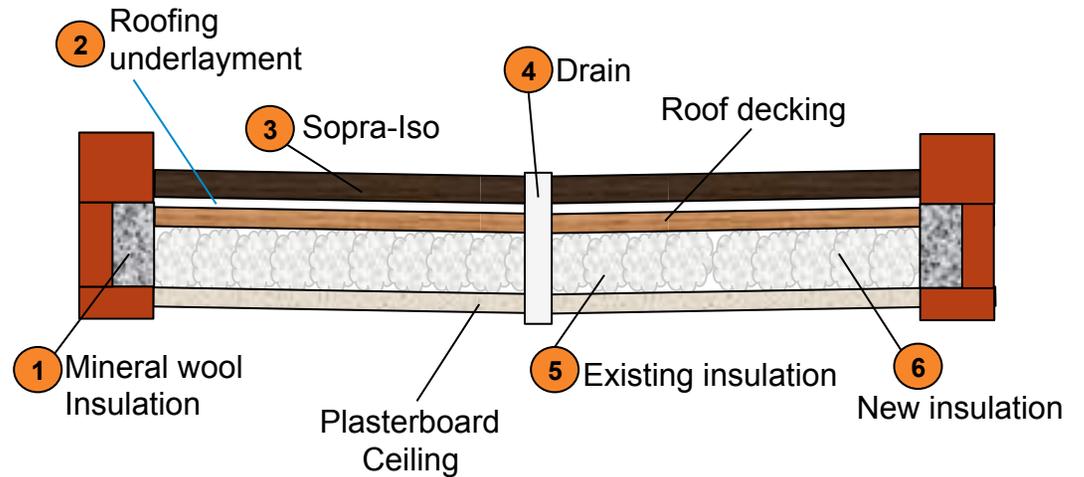

Notes

1. R-20 or R25
2. Synthetic roof underlayment with taped seams (or similar) to create air barrier.
3. Polyisocyanurate panel - thickness to be determined. The "greater" of 51% of total R-value (including insulation below) and at least 4.5" (R26)
4. Insulate around drain
5. Keep existing insulation but fill in air gap
6. Fill airspace with insulation. Insulation to be determined.