


Tech Bulletin : Basic Installation method for 2" Shiplapped Thermacork Insulation -
- directly to WRB, over sheathing & studs -
- or - directly to cinder block

Front

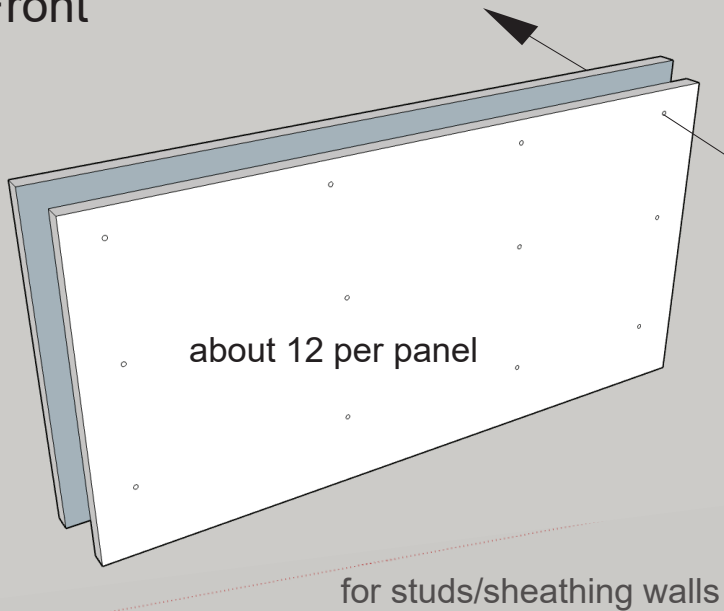


USE : Trim Head exterior screws -
- if you do not want to see hardware.
GRK brand, for instance are great.

these can be screwed straight
through the face of Thermacork
into the sheathing and studs.

bury the head of the trim head screw
1/2" into the surface of the panel if
you do not want it seen.

not every screw will hit a stud-
- but make sure some of them do
on every panel.

Back

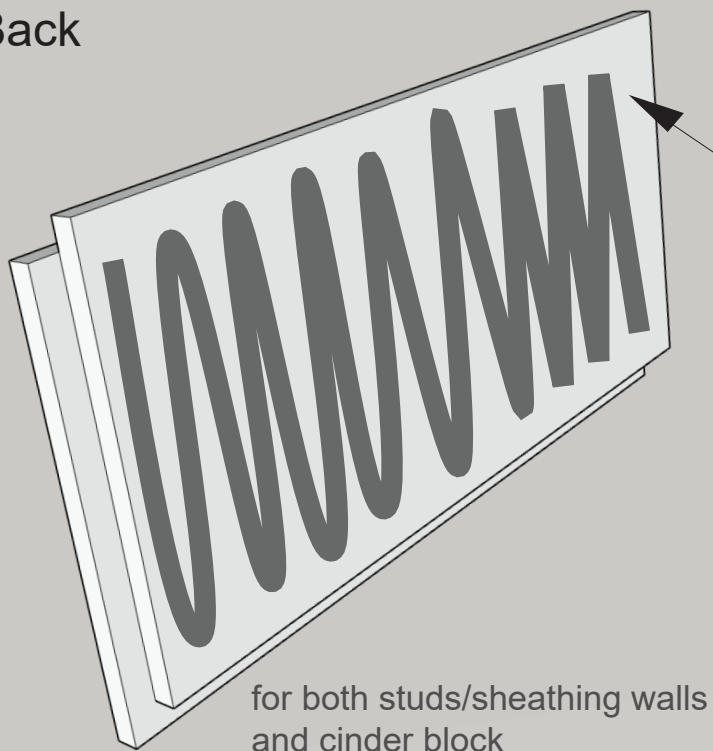

USE : Loctite brand PL Premium
construction adhesive

apply to the back face in a loose
squiggle pattern up & down.

leave 2 or 3 inches of space between
each vertical of your 'squiggle' -
- so there will be ample surface area to
evaporate water through the face of
the panel.

Use a J Roller to press somewhat firmly
in place - no need to dent the
material doing so however.