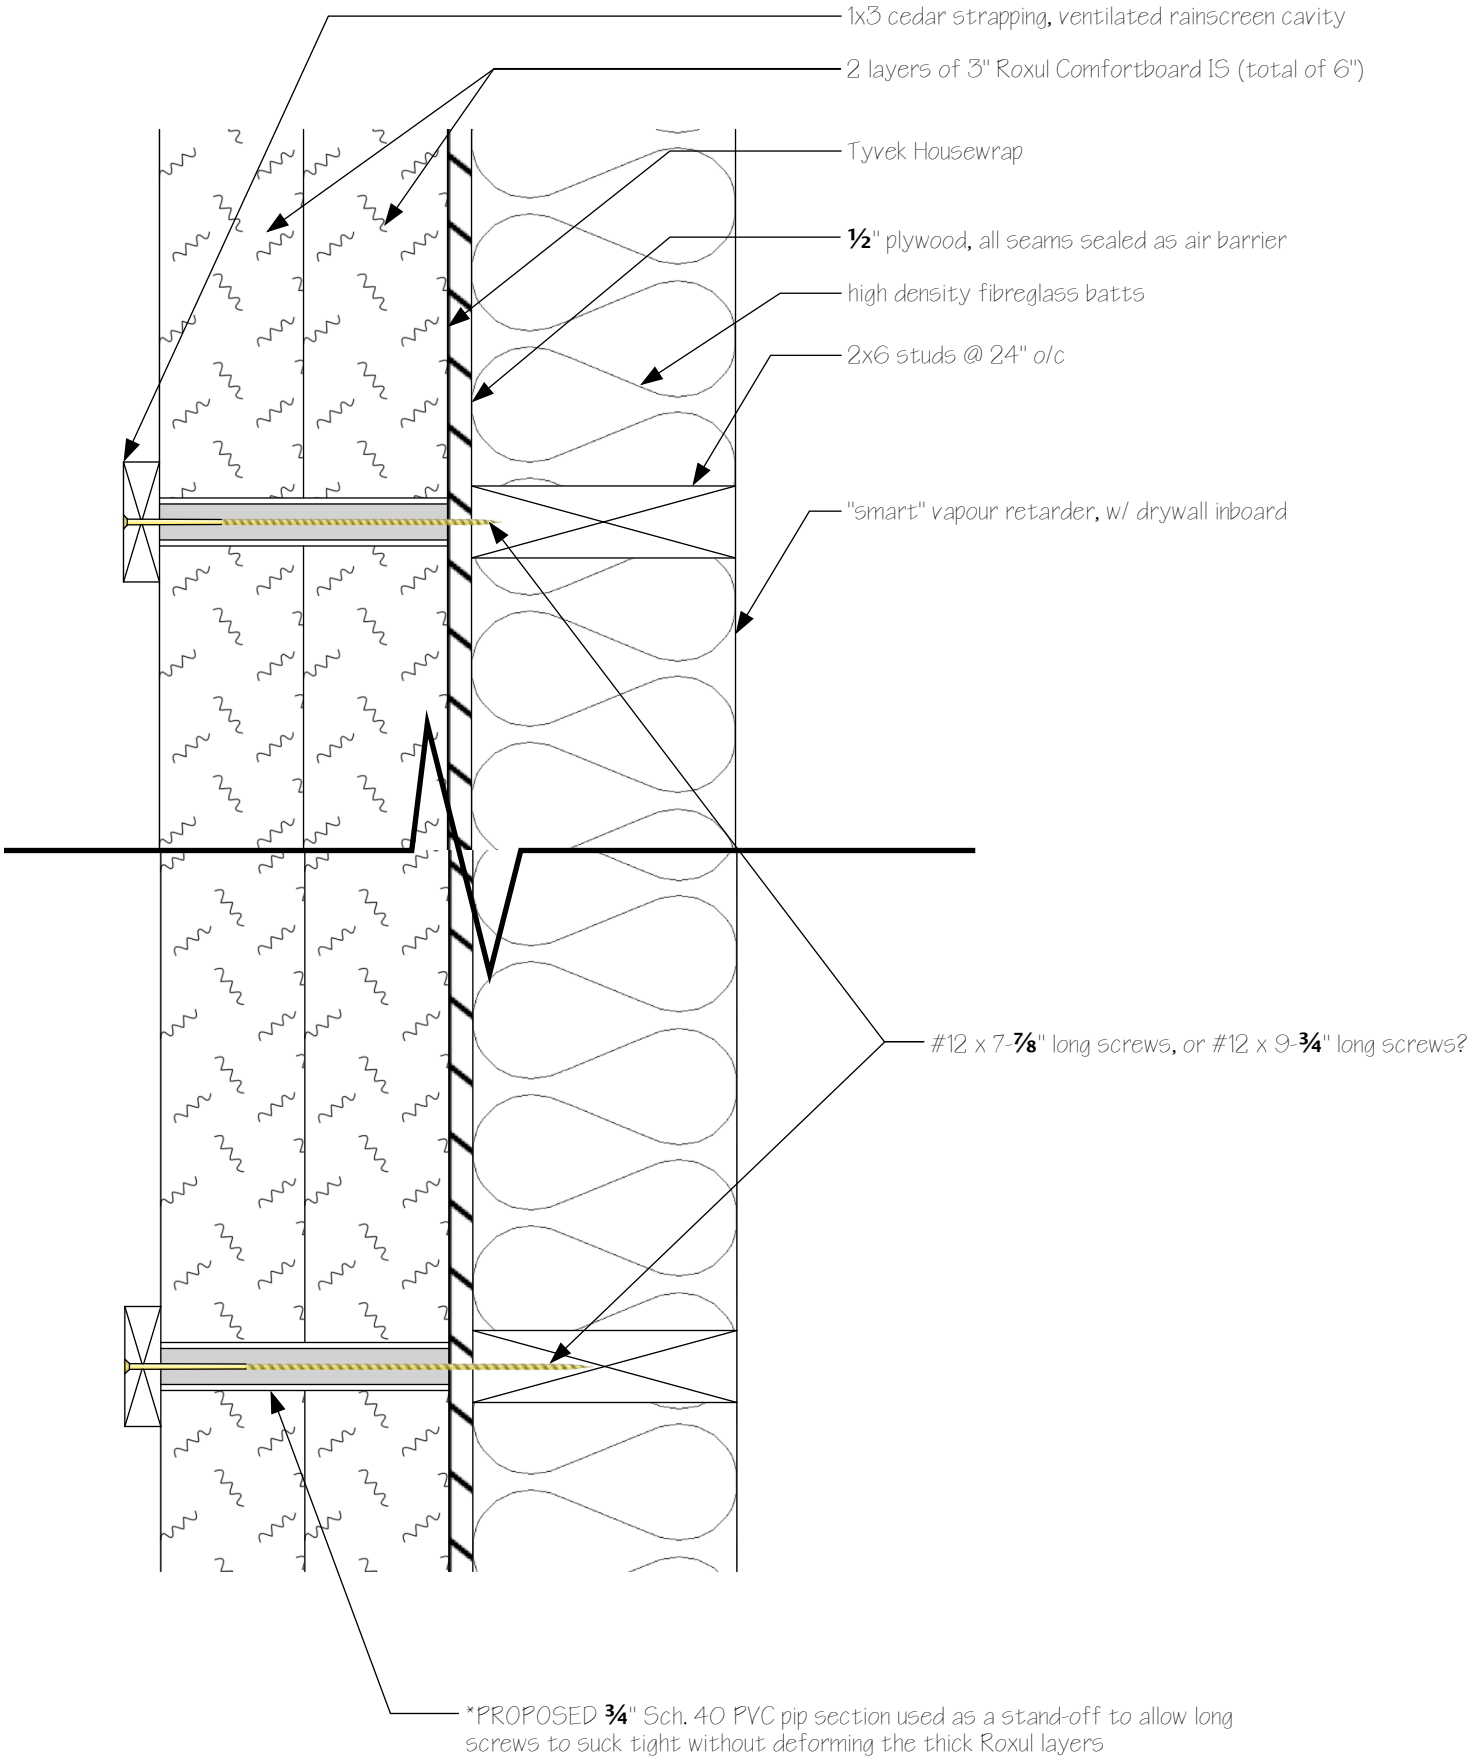
1x3 cedar strapping, ventilated rainscreen cavity
2 layers of 3" Roxul Comfortboard IS (total of 6")
Tyvek Housewrap
½" plywood, all seams sealed as air barrier
high density fibreglass batts
2x6 studs @ 24" o/c
"smart" vapour retarder, w/ drywall inboard
#12 x 7-⅞" long screws, or #12 x 9-¾" long screws?
*PROPOSED ¾" Sch. 40 PVC pip section used as a stand-off to allow long screws to suck tight without deforming the thick Roxul layers