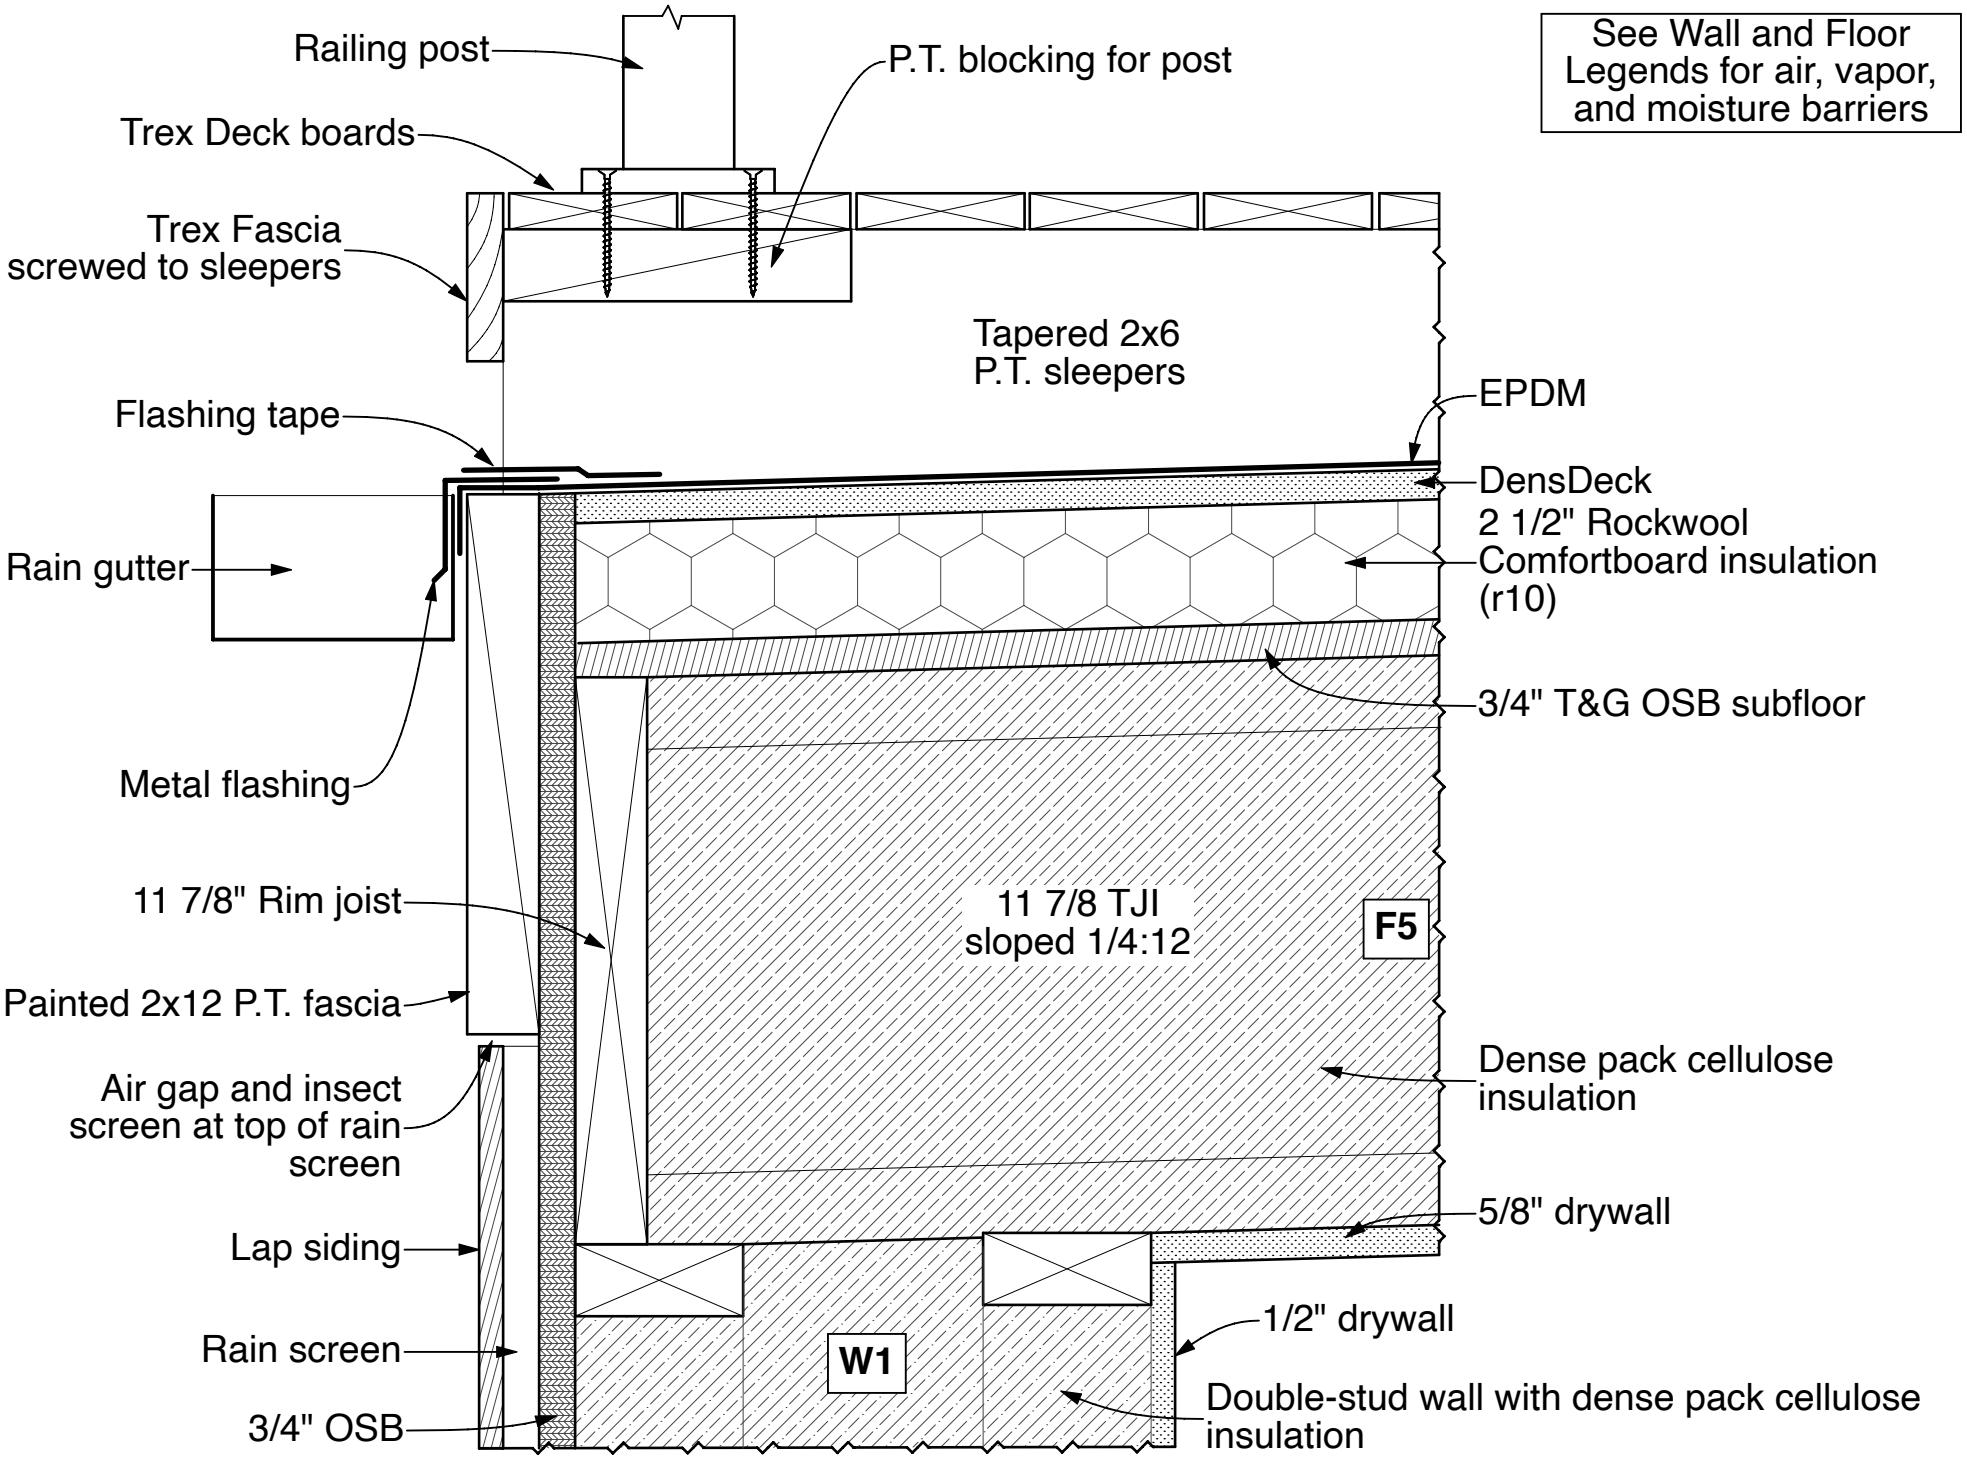
See Wall and Floor Legends for air, vapor, and moisture barriers
Railing post
P.T. blocking for post
Trex Deck boards
Trex Fascia screwed to sleepers
Tapered 2x6 P.T. sleepers
EPDM
Flashing tape
DensDeck
2 1/2" Rockwool Comfortboard insulation (r10)
Rain gutter
3/4" T&G OSB subfloor
Metal flashing
11 7/8" Rim joist
11 7/8 TJI sloped 1/4:12
F5
Painted 2x12 P.T. fascia
Dense pack cellulose insulation
Air gap and insect screen at top of rain screen
5/8" drywall
Lap siding
1/2" drywall
Rain screen
W1
Double-stud wall with dense pack cellulose insulation
3/4" OSB

3" = 1'-0"