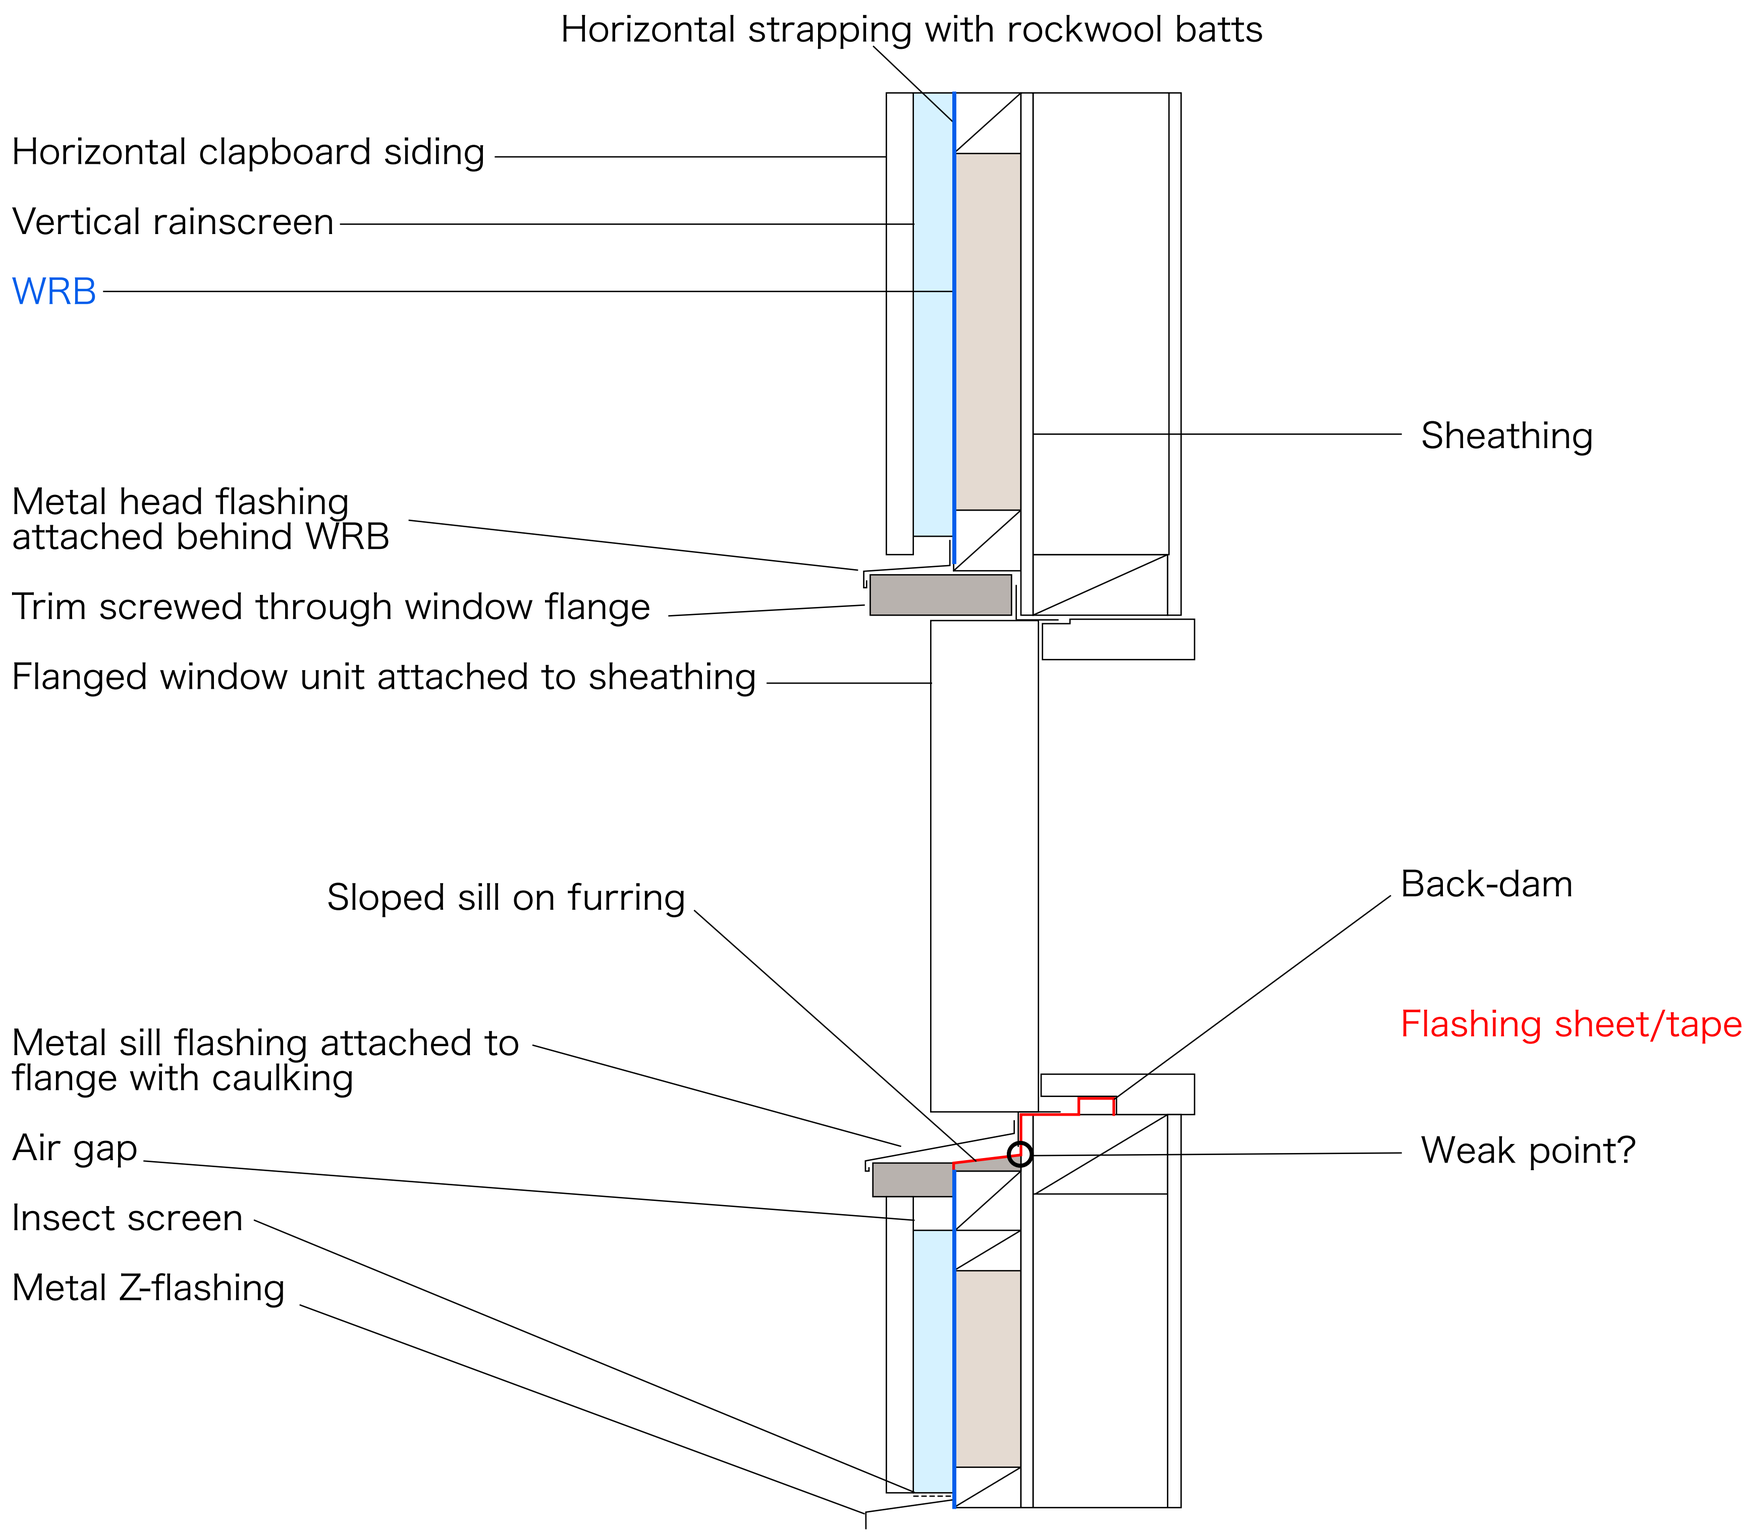
Horizontal strapping with rockwool batts
Horizontal clapboard siding
Vertical rainscreen
WRB
Sheathing
Metal head flashing
attached behind WRB
Trim screwed through window flange
Flanged window unit attached to sheathing
Sloped sill on furring
Back-dam
Flashing sheet/tape
Metal sill flashing attached to
flange with caulking
Air gap
Weak point?
Insect screen
Metal Z-flashing